


ZERO GRAVITY WAND

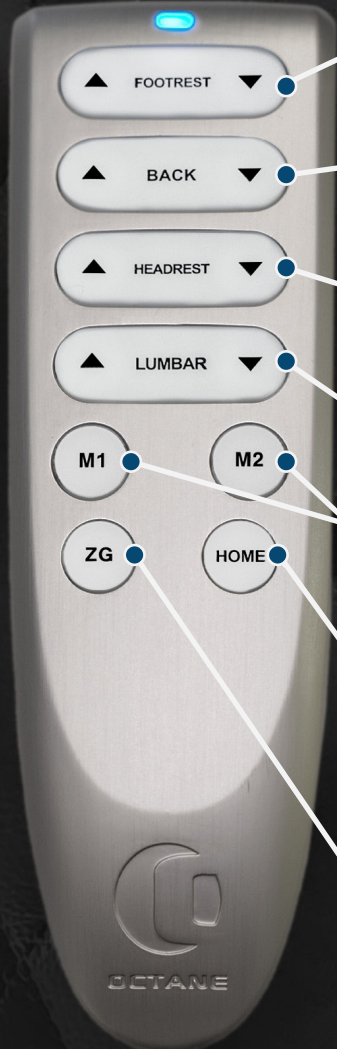

MOTORIZED FOOTREST

Automatically raise and lower the footrest to your desired position.



MOTORIZED BACKREST

Automatically recline the backrest to an unlimited number of positions at the simple touch of a button.



MOTORIZED HEADREST

Adjust the headrest for optimal head & neck relief.



MOTORIZED LUMBAR

Adjust the seat back cushion to your desired position along your spine for a premium comfort experience.



MEMORY BUTTONS

There are two memory buttons that allow you to save your preferred chair positions.



HOME BUTTON

Simply press and hold to initiate and return the recliner to the fully upright position.



ZERO GRAVITY

One push ZG button that automatically places the chair in the preset zero gravity position for optimal health and wellness benefits.